


## Installation Steps




[T90PM-Individual box]

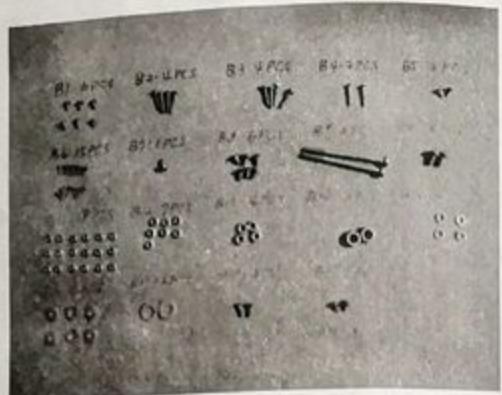

[Separate the hardwares]

**Step 1**    A1: Main Reflector  
A13: BKT  
B1: 6 pcs.    A5: Back Mount Tilt  
B11: 8 pcs.    B19: 2 pcs.

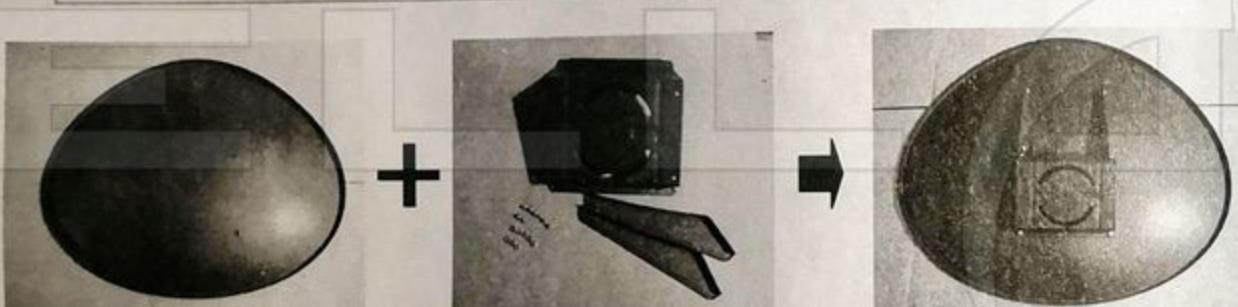

A1

A5 + A13 + B1 + B11 + B19

Step 1

**Step 2**    A6: Back Mount Elevation  
B7: 1 pc.    B8: 6 pcs.    B12: 7 pcs.



Step 1

A6 + B7 + B8 + B12

Step 2

## Installation Steps

**Step 3**

A7: Weaving Tube  
B10: 2 pcs.    B13: 2 pcs.    B15: 2 pcs.    B16: 2 pcs.




Step 2

A5 + A13 + B1 + B11 + B19

Step 3

**Step 4**

A15: M16 T-Bolt  
B9: 1 pc    B13: 1 pc    B15: 1 pc    B16: 2 pcs.

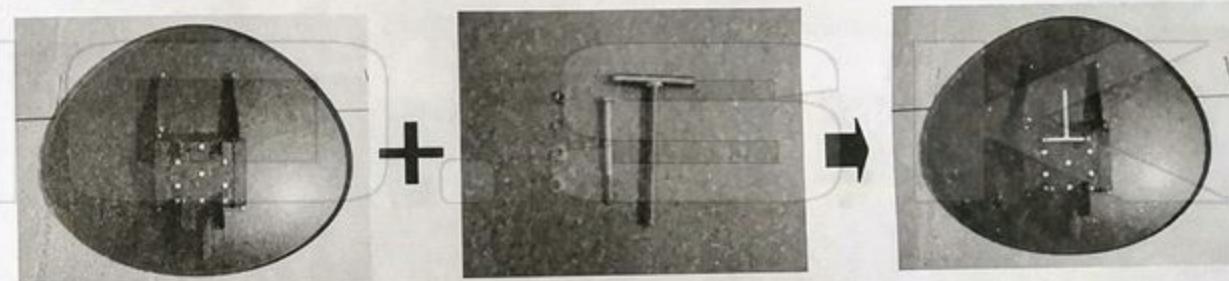


Step 3

A15 + B9 + B13 + B15 + B16

Step 4

**Step 5**



A14: BKT  
B9: 1 pc    B11: 2 pcs.    B13: 1 pc    B14: 2 pcs.  
B15: 1 pc    B16: 2 pcs.    B17: 2 pcs.    B19: 2 pcs.

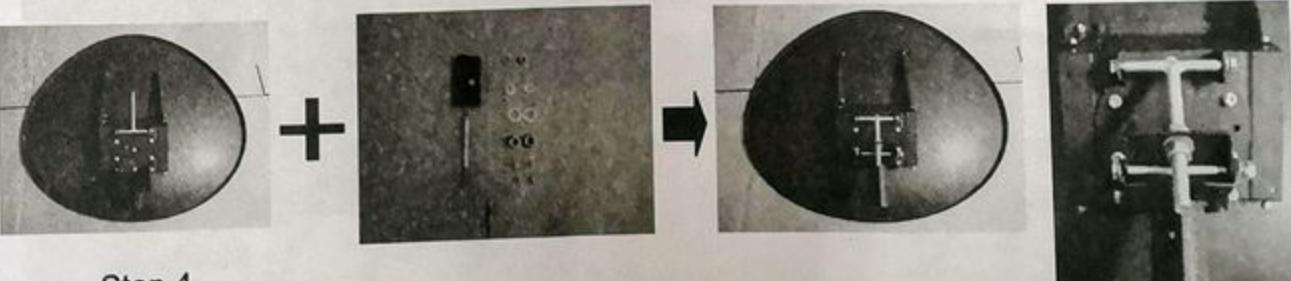


Step 4

A14 + B9 + B11 + B13 + B14  
+ B15 + B16 + B17 + B19

Step 5

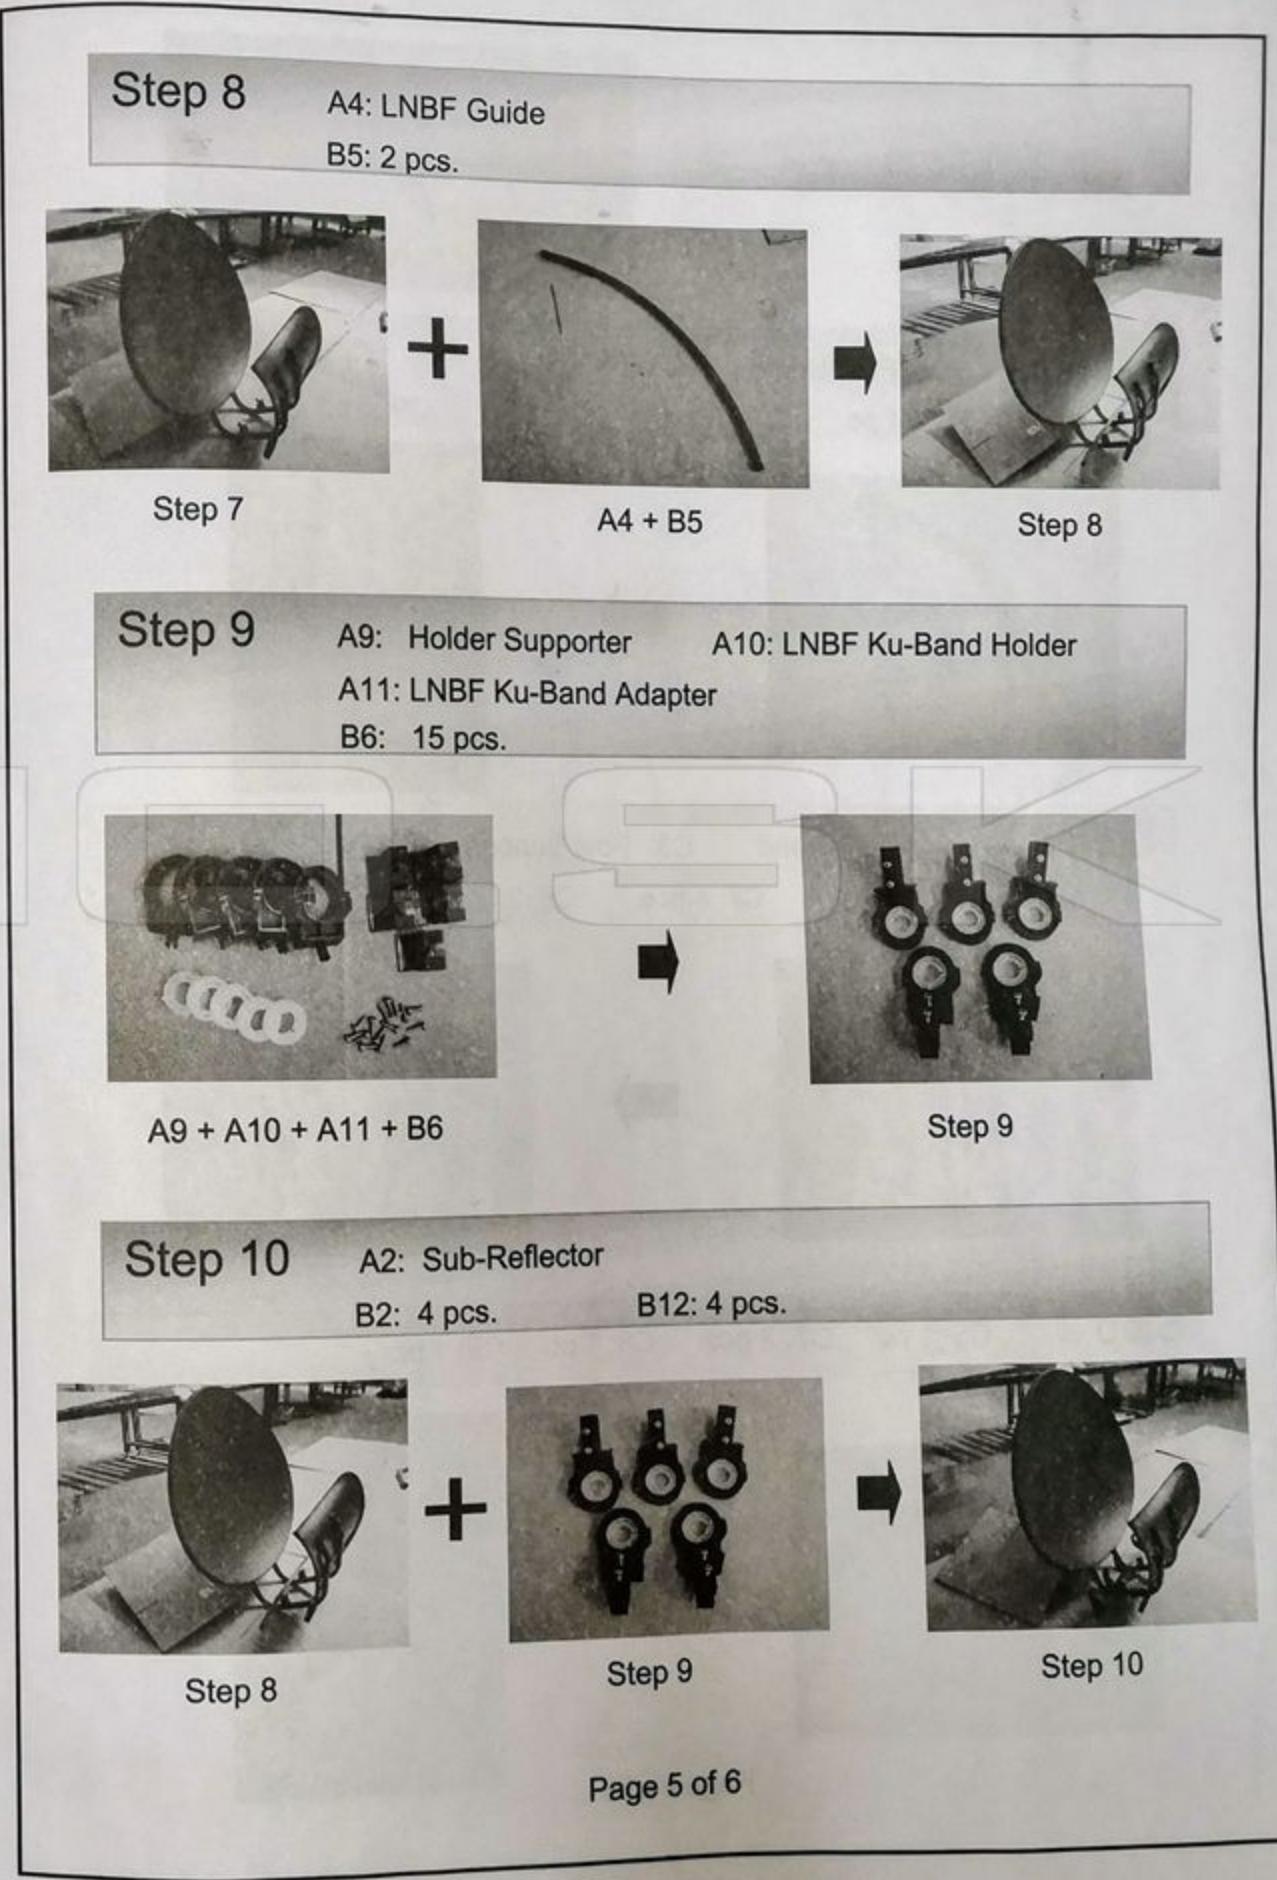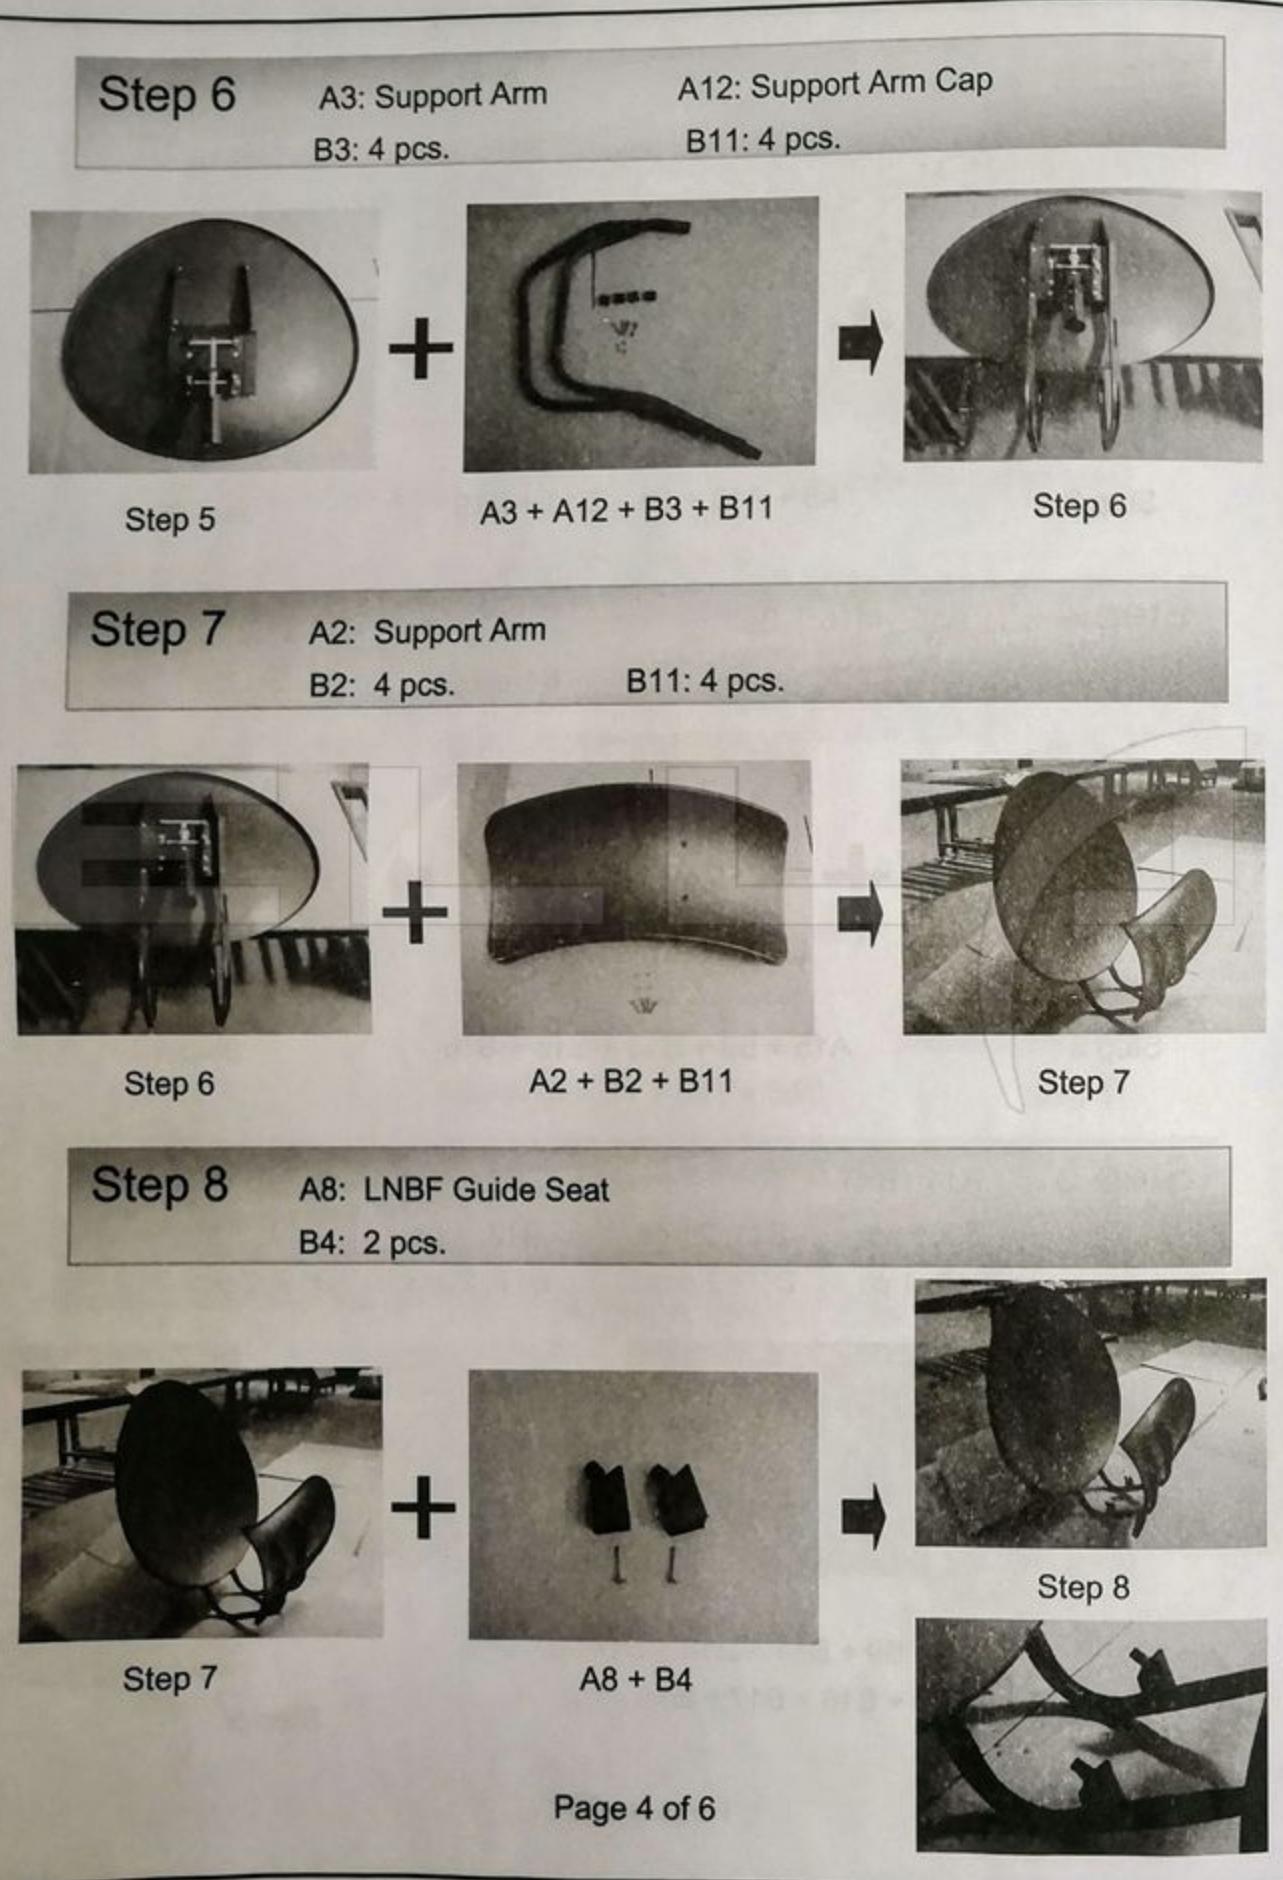

[Separate the hardwares]

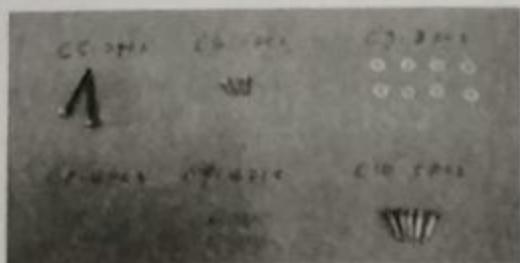

### Step 1

C1: Pole Stand

C4: BKT Stand

C5: 1 pc

C7: 2 pcs.

C8: 1 pc

C9: 1 pc



### Step 2

C2: BKT Stand



C3: Pole Support

C6: 2 pcs.

C7: 4 pcs.

C8: 2 pcs.

C9: 2 pcs.

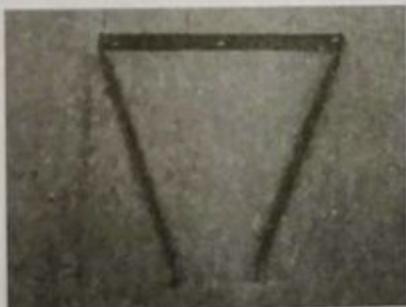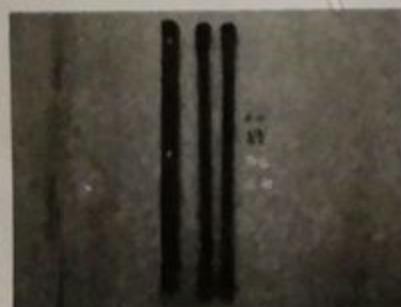

### Step 3

C5: 1 pc

C7: 2 pcs.

C8: 1 pc

C9: 1 pc

